


Cabinet Door Styles

Frameless: Also called European style cabinets, frameless cabinets feature only the door of the cabinet and require more craft to install.

Framed: Framed cabinets have extra pieces of wood surrounding the opening of the cabinet box and can be installed as an inset or overlay.

- **Inset:** Where the door is installed flush with the frame for a flat, seamless face. The entire frame is exposed.
- **Overlay:** Overlay is when the cabinet doors completely cover the cabinet box frame. You can also choose a partial overlay where 1-2 inches of the frame are exposed.

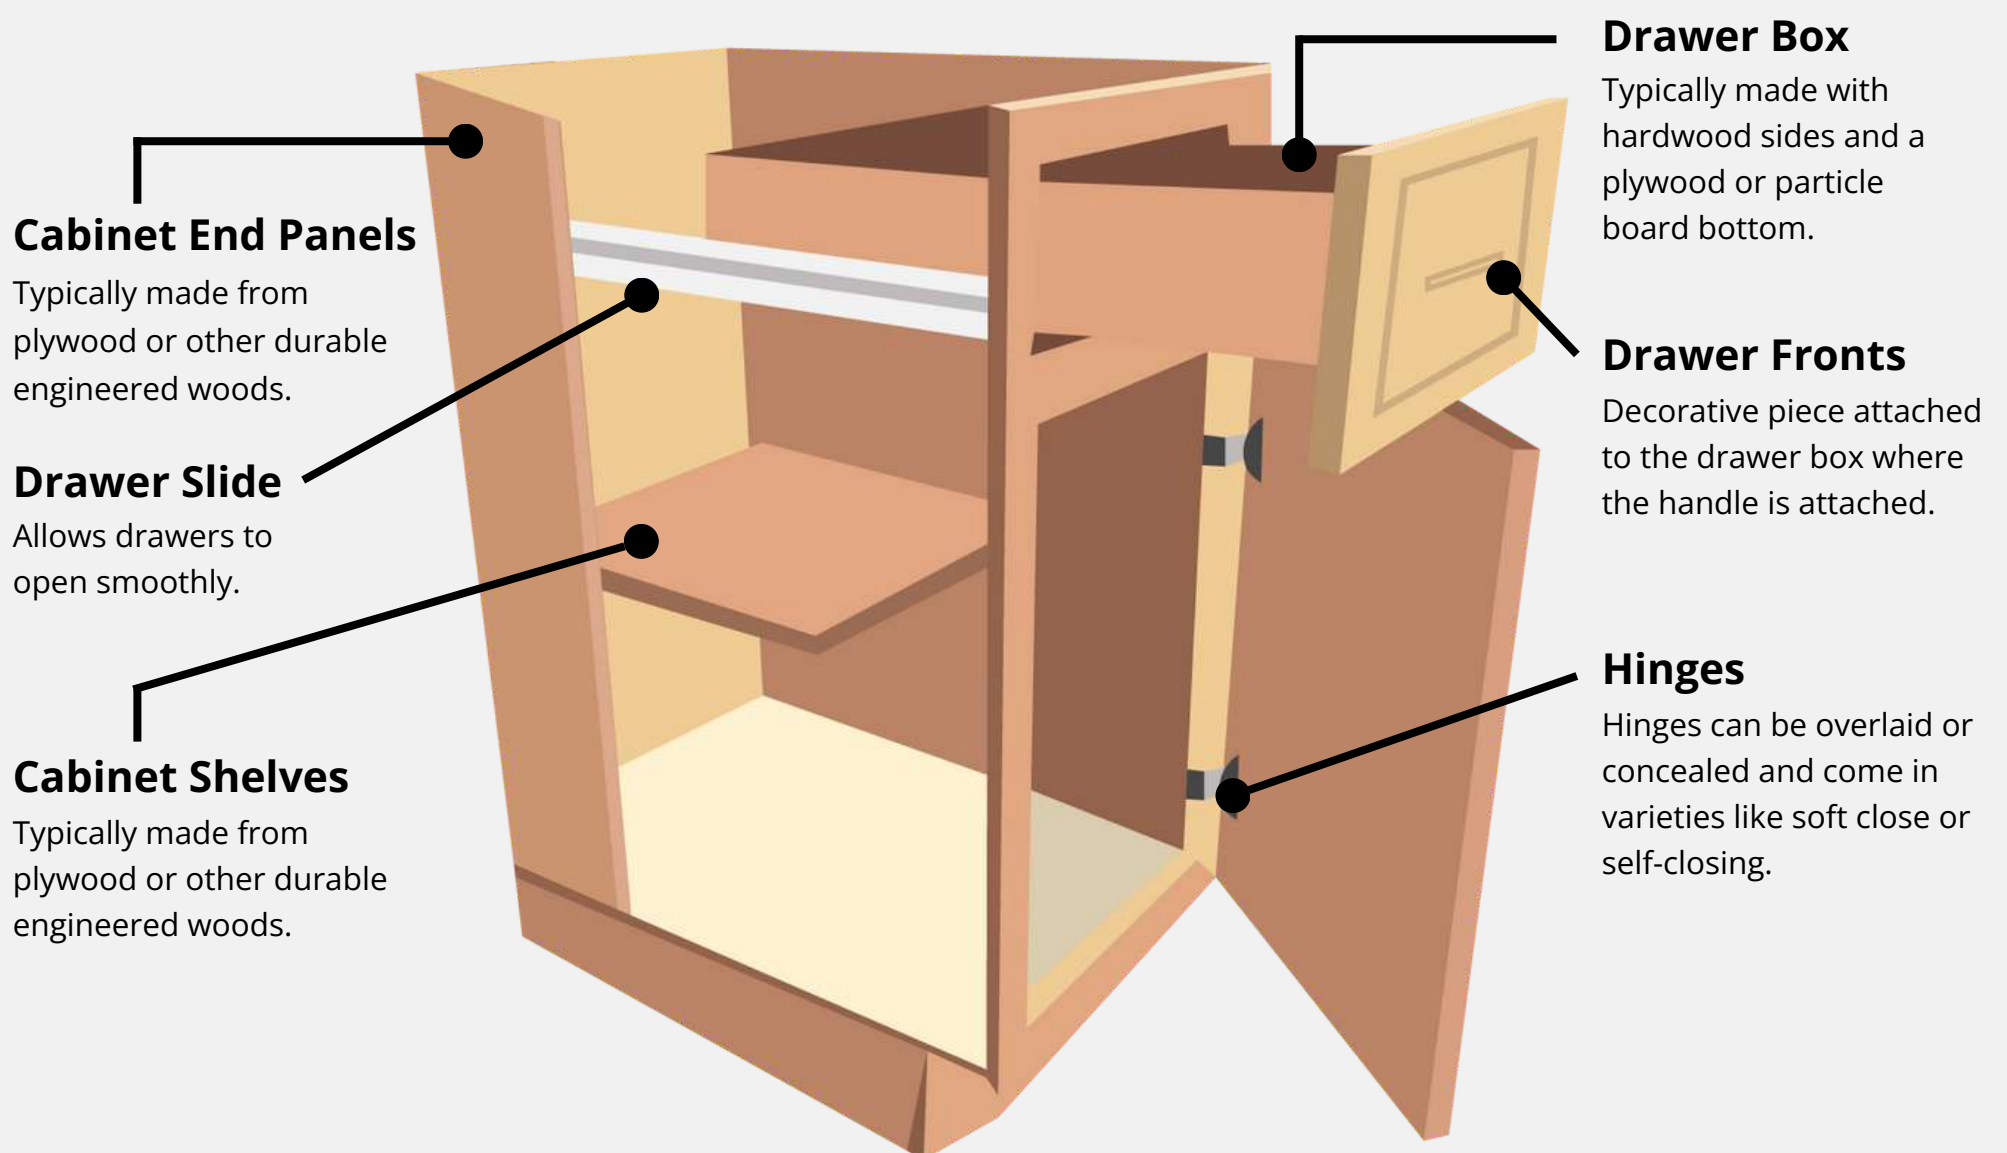

Cabinet Box

The cabinet box is the skeleton of the cabinet and is what the frame attaches to. Base cabinets rest on the floor while wall cabinets are affixed to the wall.